# **Product information**

# Digital inside micrometer Micromar 44 EWR

#### **Product features**

- Threaded connection for changing the measuring head
- Self-centering measuring head consists of 3 anvils (offset 3 x 120°)
- Anvils from 12 mm are carbide tipped
- From 12 mm the anvils can be used to measure the bottom of a hore
- From 40 mm all measuring heads are made from aluminium to reduce weight



RESET (set display to zero), ABS (display can be set to zero without losing reference to preset), mm/inch, PRESET (for entering a numerical value), DATA (data transmission via connection cable), LOCK function (key lock)

#### Package contains

basic units 44 EWg, measuring head 44 Ak, instruction manual, battery, case

#### **Application**

For measuring:

- Through holes
- Blind holes
- · Centering shoulders




Item no.: 4191033

### **Technical data**

| Measuring range mm | 85 - 100 mm                        |  |  |
|--------------------|------------------------------------|--|--|
| Measuring range    | 3.35 - 4"                          |  |  |
| Resolution mm/inch | 0.001 / .00005"                    |  |  |
| Error limit µm     | 5                                  |  |  |
| Notes error limit  | over the full length of the anvils |  |  |
| Battery type       | CR 2032 (3V Lithium)               |  |  |

# **Dimensions**

| Dimensions b in mm | 23 |
|--------------------|----|
| Dimensions c in mm | 7  |
| Dimensions d in mm | 97 |

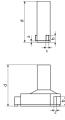

## **Accessories**

| Order no. | Designation  | Product type |
|-----------|--|--------------|
| 4102915   | Interface<br>adapter with<br>data cable<br>Digimatic | 16 EWd       |
| 4102410   | Data<br>connection<br>cable RS232C                   | 16 EXr       |
| 4102357   | Data<br>connection<br>cable USB                      | 16 EXu       |
| 4102231   | Transmitter  | 16 EWe       |
| 4102230   | Receiver   | e-Stick      |
| 4710105   | Setting ring   | 355 E        |