

Product information

Digital inside micrometer Micromar 44 EWR

Product features

- Threaded connection for changing the measuring head
- Self-centering measuring head consists of 3 anvils (offset $3 \times 120^\circ$)
- Anvils from 12 mm are carbide tipped
- From 12 mm the anvils can be used to measure the bottom of a bore
- From 40 mm all measuring heads are made from aluminium to reduce weight



Functions

RESET (set display to zero), ABS (display can be set to zero without losing reference to preset), mm/inch, PRESET (for entering a numerical value), DATA (data transmission via connection cable), LOCK function (key lock)

Package contains

basic units 44 EWg, measuring head 44 Ak, instruction manual, battery, case

Application

- For measuring:
- Through holes
 - Blind holes
 - Centering shoulders

Data interface

Digimatic, Opto RS-232C, USB


Item no.: 4191131

Technical data

Battery type	CR 2032 (3V Lithium)
Measuring range mm	60 - 70 mm
Measuring range inch	2.35 - 2.75"
Resolution mm/inch	0.001 / .00005"
Error limit μm	5
Notes error limit	over the full length of the anvils

Dimensions

Dimensions b in mm	18
Dimensions c in mm	5
Measuring depth with extension	229
Dimensions d in mm	79
Measuring depth	79

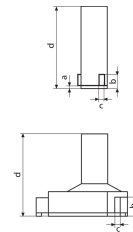

Accessories

Order no.	Designation	Product type
4102915	Interface adapter with data cable Digimatic	16 EWd
4102410	Data connection cable RS232C	16 EXr
4102357	Data connection cable USB	16 EXu
4102231	Transmitter	16 EWE
4102230	Receiver	e-Stick
4710080	Setting ring	355 E